




ChefsChoice M677 Power Supply Replacement

This guide shows how to replace the power supply for the Chef'sChoice® Model 677 Cordless Kettle.

Written By: Randy Fromm

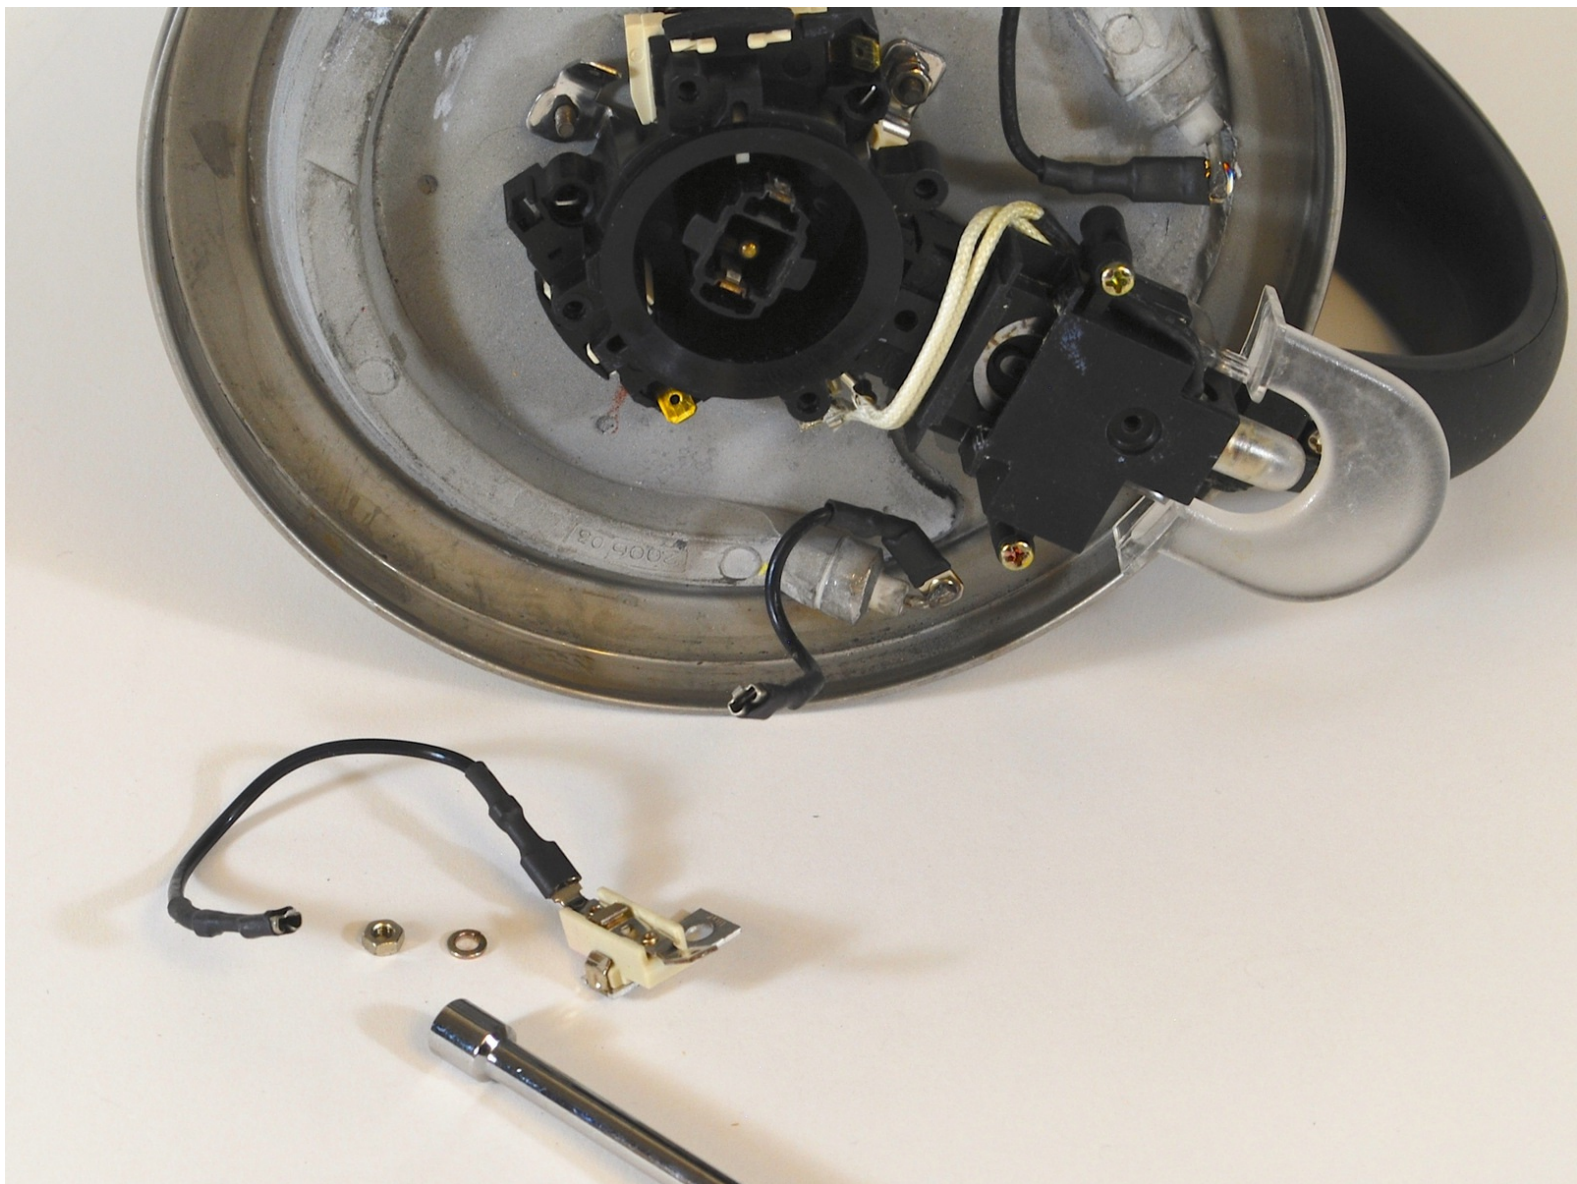

INTRODUCTION

This guide will walk you through the following steps:

- Removing the bottom of the kettle
- Locating and identify the internal components
- Disconnecting the wiring from the internal components
- Removing the kettle power supply

Reassembly is as simple as reversing the steps!



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [7/32" Nut Driver](#) (1)
- [Tweezers](#) (1)
- [Large Needle Nose Pliers](#) (1)



PARTS:

- [Replacement Power Supply](#) (1)
-

Step 1 — Power Supply

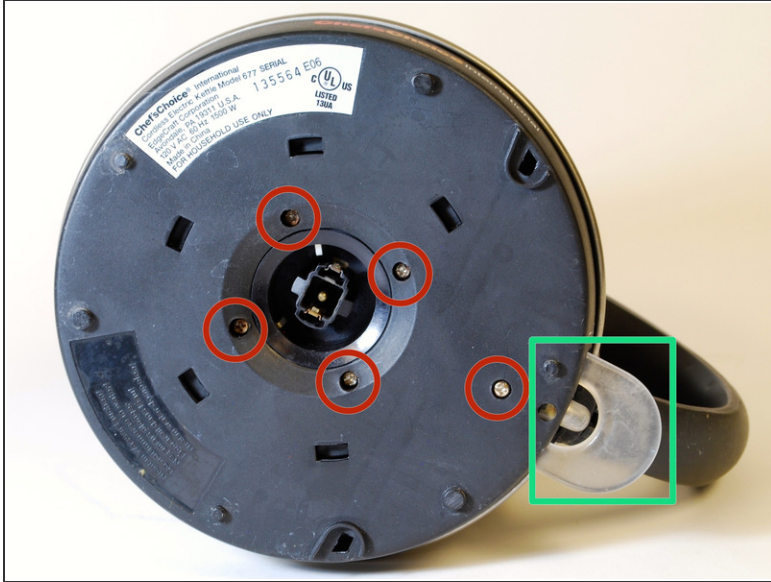

FIRST IMAGE:

- The red circles identify the five (5) Phillips screws.
- The green square identifies the ON/OFF Switch.
- SECOND IMAGE: Remove the five (5) 3/8" Phillips screws from the base of the kettle using a #1 Phillips head screwdriver.

Step 2




- Using your hands, pry the base off the kettle. Open it like a clamshell: the ON/OFF switch will be the hinge point.

Step 3



- Using your hands, remove the kettle base by sliding it over the switch.

Step 4

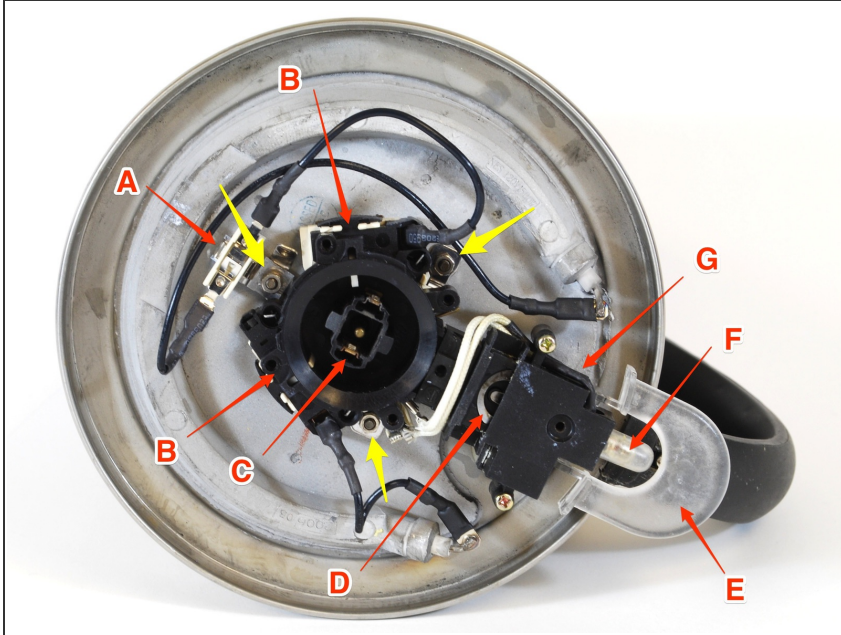


i Now that you have removed the bottom from the kettle, identify all of the parts. The YELLOW arrows point to the posts for mounting the control circuit components. The RED arrows point to the following parts:


- A: The power supply.
- B: The two boil-dry protection switches, one on either side of the central black ring.
- C: The power coupling. This fits into the baseplate when you place the kettle on it.
- D: The thermostat. This is a little metal ring, half hidden by the switch cover.
- E: The manual ON/OFF switch.
- F: The indicator light.
- G: The steam chamber. This heats the thermostat, which turns off the kettle automatically.

Step 5




- Take note of how the wires connect to the components to aid reassembly.
- Remove the connectors (spaded lugs) from the circuit components as shown in the second image.
 *DO NOT pull on the wires, as you might pull them out of the connectors.*
- You should be able to remove each connector easily by hand. Pinch the lug between your fingers and pull in the direction of the attached wire.
- If necessary, use needle-nose pliers to grasp the lug shank firmly. Gently pull the lug in the direction of the attached wire.
- Gently bend the disconnected wires back and out of the work area.

Step 6

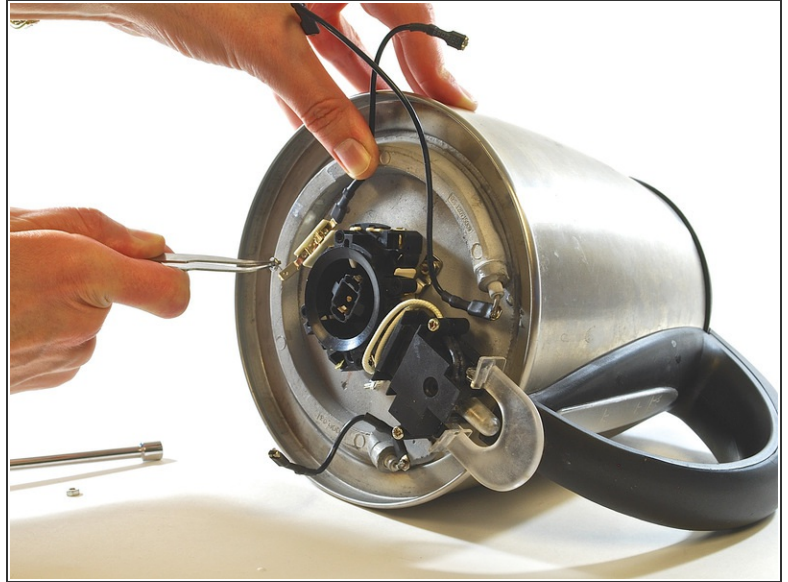

- Using a 7/32" nut driver, remove the hex nut that secures the power supply to the base of the kettle.
- Using a pair of tweezers, remove the split-ring lock washer located under the nut. (It may be hard to see in low light.)

Step 7

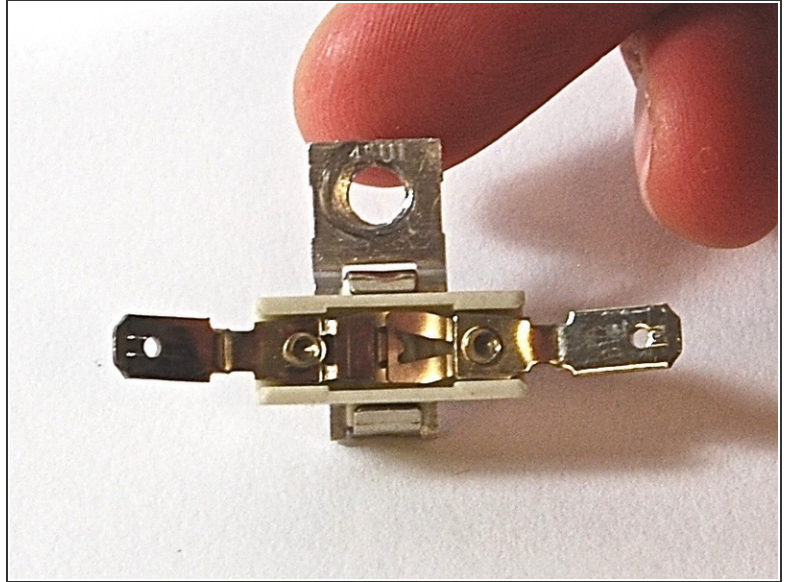

- Using your hands, grasp the wire that is still connected to the power supply. Carefully lift the power supply off the threaded stud to which it was coupled.

i At this point you will have removed the following parts from the kettle:

- Five (5) screws.
- The kettle base.
- One (1) 7/32" hex nut.
- One (1) 7/32" split-ring lock washer.
- One (1) power supply unit.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 10:22:15 AM.